830 SureFlo® Soap Systems Installation Instructions

Foam Soap Cabinet ..... Pages 2-9
Liquid Soap Cabinet ..... Pages 10-19



SUREFLO®
SOAP DISPENSING SYSTEM

BOBRICK
BUILDING VALUE SINCE 1906

INSTALLATION INSTRUCTIONS

SureFlo® SOAP DISPENSING SYSTEM

FOAM VERSION ONLY



B-830 Foam Soap Cabinet Installation ..... Pages 2-8

Prior to beginning installation, read instructions and familiarize yourself with parts and procedure.






SUREFLO®
SOAP DISPENSING SYSTEM

BOBRICK
BUILDING VALUE SINCE 1906

Form No. 833-69 i10/10/18 S/F
© 2018 Bobrick Washroom Equipment, Inc.
Printed in U.S.A.

Parts List


Items Included

Part #	Description		Qty.
830-306	**Bladder Assembly**		**1**
830-57	**Drip Tray**		**1**
830-278	**Brackets**		**2**
830-215	**Light Switch Indicator (LSI) Retrofit Kit**		**1**
830-207	**Hardware Packet** *(Items Included in Packet)*		**1**
687-6	Spacer		1
830-242	Adhesive Tape		1
1000160	Toggle Bolt		6
1000085	Stud Screw		6
5067-11	Washer		6
232-11	Hex Nut		2
576-181	Lock Washer		2
24-17	BobKey		1
833-164	**Tubing Connector Packet** *(Items Included in Packet)*		**1**
833-113	Inline Tubing Connector		1
833-16	Snapper Clamp		2

Purchase Separately


Part #	Description		Qty.
833-359	**Soap Pump Assembly 4" Spout** (*Items Included in Assembly*)		**1**
833-22	Foam Dispensing Assy		1
833-34	Basin Mounting Kit		1
833-341	Soap Pump Connector Kit		1
833-372	**Soap Pump Assembly with Shank 6" Spout** (*Items Included in Assembly*)		**1**
833-22	Foam Dispensing Assy		1
833-34	Basin Mounting Kit		1
833-341	Soap Pump Connector Kit		1

833-341 Included in 833-359 and 833-372 Soap Pump Assemblies

833-162	**Tubing 25' Packet**		**1**
833-341	**Soap Pump Connector Kit** (*Items Included in Kit*)		**1**
833-110	Vertical Tube 10" Length		1
833-311	Tee, 3-Barb		1
830-312	Reducing Connector, 3-Barb		1
833-72	Intermediate Tube 50" Length		1
830-28	Cable Support		2
124-62	Cable Tie		2
528-19	Screw Packet (4 Screws)		1 packet

Tools Required

Drill

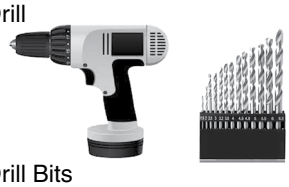

Drill Bits
5/8" diameter for Toggle bolt
3/16" diameter for Stud Screw
Masonry Bit for Tile

Pliers



Tape Measure and Pencil



Level



Screw Drivers
Phillips
Slotted #2 and #3



PVC Cutter



Utility Knife or Cutter



Form No. 833-69 i10/10/18 S/F


© 2018 Bobrick Washroom Equipment, Inc.

Printed in U.S.A.

Cabinet Installation


1. Tape Template to desired position and mark holes as indicated:

   Cabinet can be installed on left or right side of wall. Clearance: If cabinet is mounted under soap pump, allow 5" (130mm) under top surface of counter for shank extension connection.

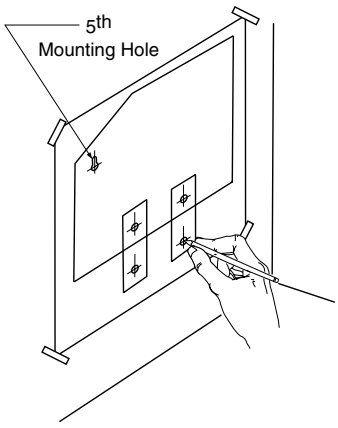


2. Drill 5/8" holes as marked by template.

   If drilling into stud, drill 3/16" hole. Provide adequate backing where necessary.

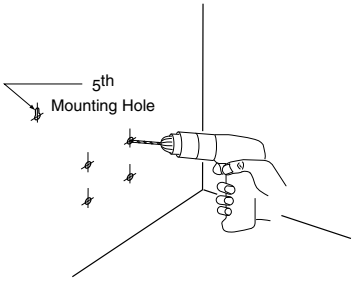


3. **Important:** Keep bolt loose until cabinet has been placed on brackets.

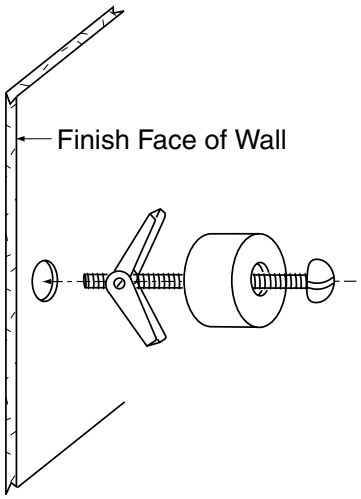


4. Attach Brackets to Wall with Toggle Bolts (supplied). Use a level to ensure brackets are leveled horizontally.

   **** For Tile Only:** Bottom 2 toggle bolts can be replaced with #10 screws and blue anchors (not provided).*

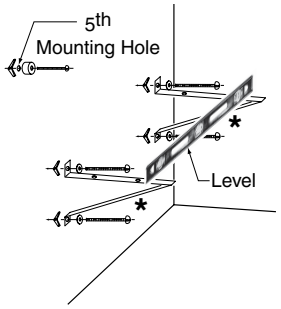


5. Route tubing through hole in cabinet side panel or back wall.

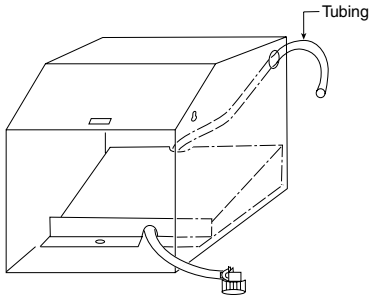


© 2018 Bobrick Washroom Equipment, Inc.

Cabinet Installation cont'd


6. Place double sided adhesive tape on top of back bracket and remove protective strip from adhesive.

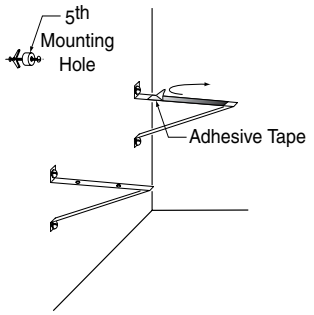


7. Without lowering the back of the cabinet. Place Cabinet on front Bracket aligning weld studs on bottom of cabinet through holes in front bracket and gently place back of cabinet on the back bracket which has the adhesive tape.

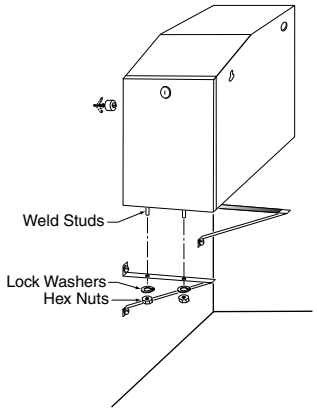


8. Place 2 lock washers and 2 hex nuts supplied on the weld studs on bottom of cabinet and tighten to secure cabinet to front bracket.

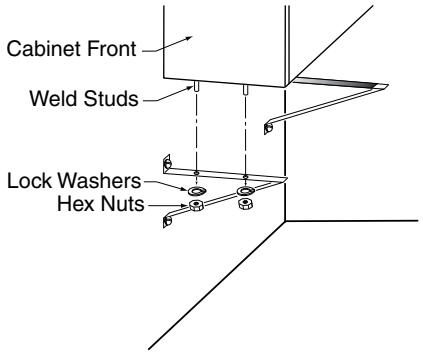


9. To secure cabinet to wall, insert 5th Toggle Bolt head through key hole located at top side of cabinet. Slide bolt head through top of keyhole and tighten.

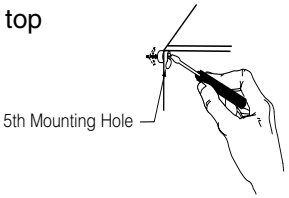

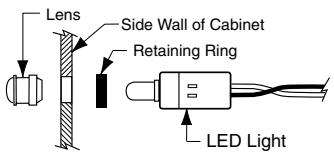

10. Hook up Low Soap Indicator (LSI) Light.

    Connect two "C" sized batteries (supplied) to battery connector. Place clear lens through the hole from outside of cabinet. Insert Black retaining ring on clear lens. Insert LED (Red Light) from the inside, through the retainer ring into clear lens.

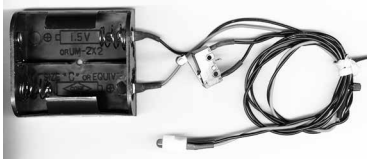


    Note: Red LED Light should flash when the batteries are connected. LED light will stop flashing when reservoir bladder is filled with soap. (Red light may flash for 3-6 hours after SureFlo soap cartridge is connected.)

Form No. 833-69 i10/10/18 S/F
© 2018 Bobrick Washroom Equipment, Inc.
Printed in U.S.A.


Tubing Connections and Soap Pump Installation (Existing and New Soap Dispensers)

1. For new installations, mount Shank. Make sure countertop surface around mounting hole is clean and free of soap residue. Insert Shank through 1" (25mm) diameter hole. *Make sure the Black Rubber Gasket is in place between the countertop and Shank*. Place 822-43 Rosette Washer and Mounting Nut onto Shank under counter top. *Tighten Mounting Nut against underside of countertop.*


   Caution: *Do not over-tighten Mounting Nut.*

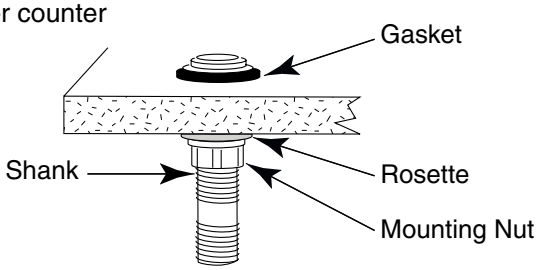

2. Insert soap pump assemblies with vertical tubes into Shanks.

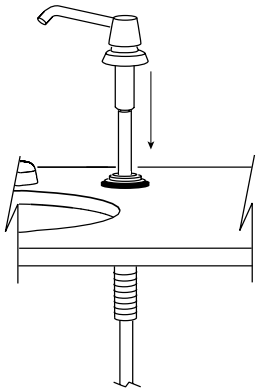


3. Secure the escutcheons by turning clockwise until lock snaps into position. Position Spout over the lavatory.

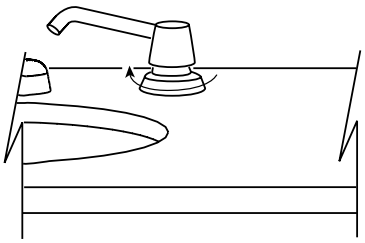

4. Connect Tubing from cabinet to 830-312 Reducer - Connect Reducer to 3-Barb Tee placed under first soap pump in the line using supply tube provided. Make sure tube is completely engaged on the Tee fitting.


   Note: Excess tubing may need to be cut-off.

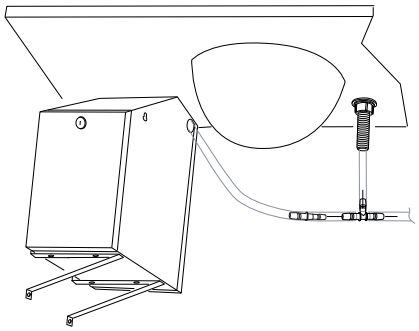


© 2018 Bobrick Washroom Equipment, Inc.

Tubing Connections and Soap Pump Installation (Existing and New Soap Dispensers)


5. Connect bottom end of all soap pump vertical tubes to vertical arms of all Tees except the last soap pump in the line.

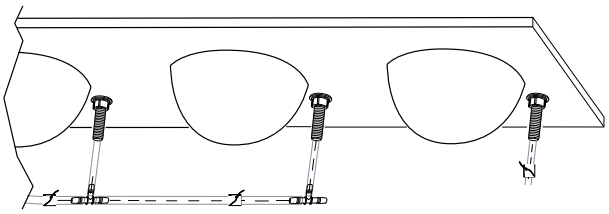


6. Connect a length of 833-72 Intermediate Tubing from the first Tee to the next Tee locations. Cut Tubing to desired length between soap pumps and connect to successive locations except the last soap pump in the line. Make sure tube is completely engaged on the Tee fittings.

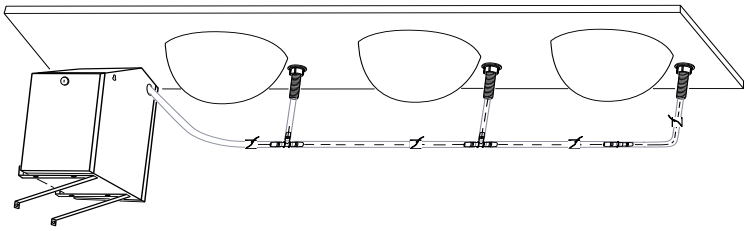


7. Connect intermediate tube to last horizontal arm of Tee at next to last soap pump in the line. Connect to other end of last intermediate tube under last soap pump in the line. Connect bottom end of vertical tube of the last 833-113 Make sure tube is completely engaged on the fittings.

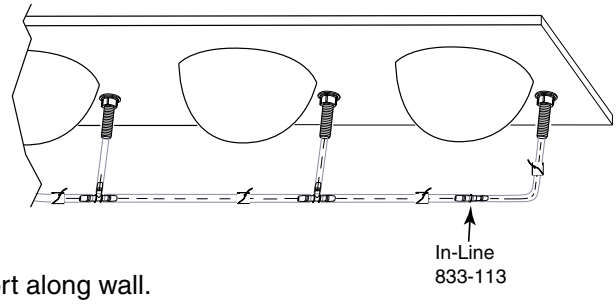

8. Screw Cable Supports into wall between each Soap Pump to support along wall.

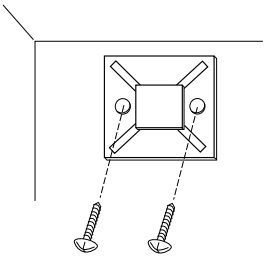


9. Attach intermediate tubing to cable supports with the cable ties between soap pumps.

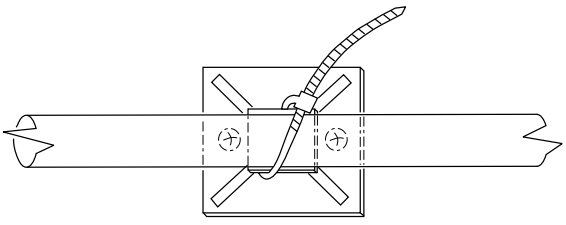


Form No. 833-69 i10/10/18 S/F
© 2018 Bobrick Washroom Equipment, Inc.
Printed in U.S.A.

Prime Soap System


1. Place Soap Tank Cartridge into Soap Cabinet and remove protective cover.

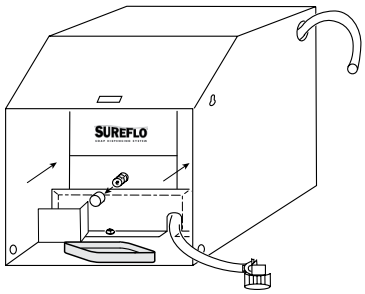


2. Screw Soap Supply Line Cap to Cartridge Outlet by turning clockwise. Soap should flow through the tubing.

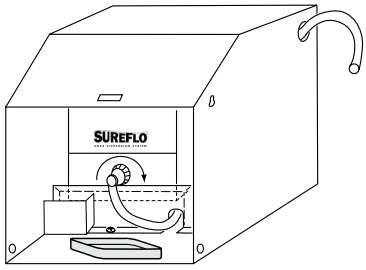

3. Prime Soap System beginning with the dispenser closest to Cabinet until soap is dispensed.

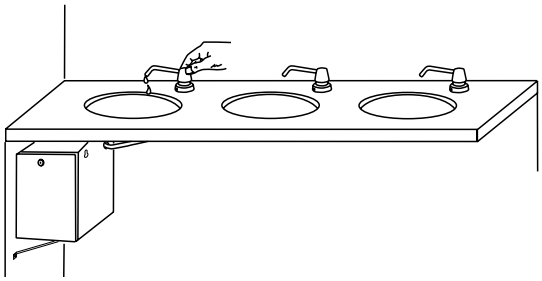

4. Pump each successive dispenser until soap is dispensed and the entire line of tubing is free of air and filled with soap.

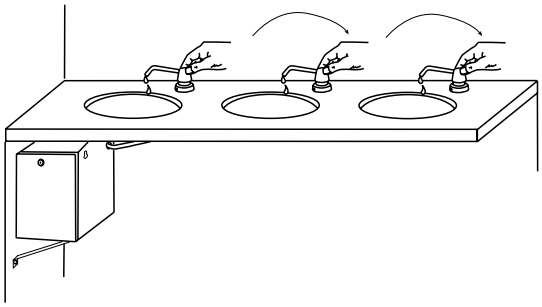

© 2018 Bobrick Washroom Equipment, Inc.

BUILDING VALUE SINCE 1906

BOBRICK.COM

In the United States: BOBRICK WASHROOM EQUIPMENT, INC.
Los Angeles: 6901 Tujunga Avenue., North Hollywood, CA 91605-6213, Tel: (818) 982-9600, Fax: 818-503-1102
New York: 200 Commerce Drive, Clifton Park, NY 12065-1350, Tel: (518) 877-7444, Fax: 518-877-5029
or email customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY
45 Rolark Drive, Toronto, Ontario M1R 3B1, Eastern Canada: Tel: (877) 423-6555, Fax: (877) 423-8555;
Western Canada: Tel: (877) 423-6444, Fax: (877) 423-8444

SureFlo® is a trademark of Bobrick Washroom Equipment, Inc.

Form No. 833-69 i10/10/18 S/F © 2018 Bobrick Washroom Equipment, Inc. Printed in U.S.A.

INSTALLATION INSTRUCTIONS

SureFlo® SOAP DISPENSING SYSTEM

LIQUID VERSION ONLY



B-830 Liquid Soap Cabinet Installation ..... Pages 2-8

Prior to beginning installation, read instructions and familiarize yourself with parts and procedure.





SUREFLO®
SOAP DISPENSING SYSTEM

BOBRICK
BUILDING VALUE SINCE 1906



Form No. 830-569 r10/3/18 S/F
© 2018 Bobrick Washroom Equipment, Inc.
Printed in U.S.A.

Parts List

Items Included

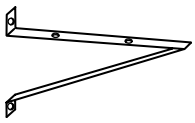Part #	Description	Qty.
830-306	**Bladder Assembly** 	**1**
830-57	**Drip Tray** 	**1**
830-278	**Brackets** 	**2**
830-207	**Hardware Packet** *(Items Included in Packet)*	**1**
687-6	Spacer 	1
830-242	Adhesive Tape 	1
1000160	Toggle Bolt 	6
1000085	Stud Screw 	6
5067-11	Washer 	6
232-11	Hex Nut 	2
576-181	Lock Washer 	2
24-17	BobKey 	1
830-113	Inline Tubing Connector 	1
830-16	Snapper Clamp 	2
830-215	Light Switch Indicator (LSI) 	1

Purchase Separately

Part #	Description	Qty.
830-341	**Soap Pump Conversion Kit** *(Items Included in Kit)*	**1**
830-313	Vertical Tube 10" Length 	1
830-311	Tee, 3-Barb 	1
830-312	Reducing Connector, 3-Barb	1
830-72	Intermediate Tube 50" Length 	1
830-28	Cable Support 	2
124-62	Cable Tie 	2
528-19	Screw Packet 	1
830-162	**Tubing 25' Length** 	**1**
822-408	**Long Shank** *for Countertops more than 1-3/4" (45mm) Thick*	**1**
830-359	**Soap Pump Assembly with Shank 4" Spout** (*Items Included in Assembly*) 	**1**
830-355	Soap Pump	1
8221-402	Short Shank 	1
830-372	**Soap Pump Assembly with Shank 6" Spout** (*Items Included in Assembly*) 	**1**
830-356	Soap Pump	1
8221-402	Short Shank 	1

Tools Required

Drill



Drill Bits
5/8" diameter for Toggle bolt
3/16" diameter for Stud Screw
Masonry Bit for Tile

Pliers



Tape Measure and Pencil



Level



Screw Drivers
Phillips
Slotted #2 and #3



PVC Cutter or Hack Saw



Utility Knife or Cutter




Form No. 830-569 r10/3/18 S/F
© 2018 Bobrick Washroom Equipment, Inc.
Printed in U.S.A.

Cabinet Installation

1. Tape Template to desired position and mark holes as indicated:


   Cabinet can be installed on left or right side of wall. Clearance: If cabinet is mounted under soap pump, allow 5" (130mm) under top surface of counter for shank extension connection.

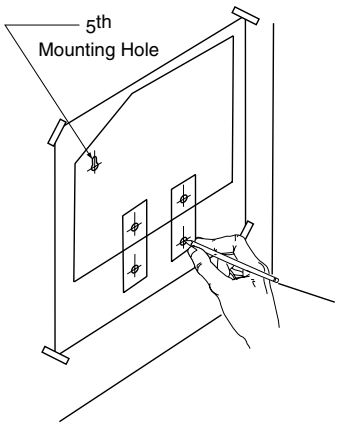


> **Thick Countertop**
> **Installer Note:**
> If counter top is more than 1-3/4'' (45mm) thick and a 6'' (150mm) shank (Part No. 822-408) is used, 8" (205mm) clearance under top surface of counter is required.

2. Drill 5/8" holes as marked by template.

   If drilling into stud, drill 3/16" hole. Provide adequate backing where necessary.

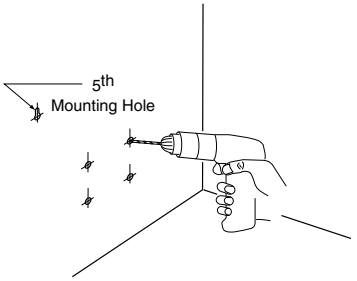


3. **Important:** Keep bolt loose until cabinet has been placed on brackets.

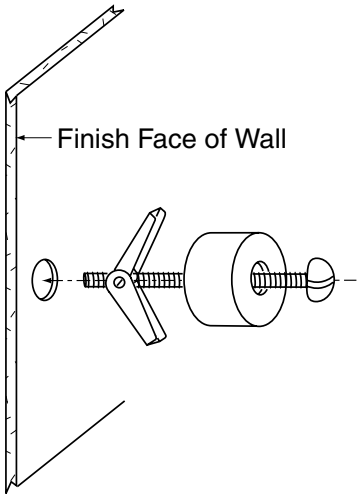


4. Attach Brackets to Wall with Toggle Bolts (supplied). Use a level to ensure brackets are leveled horizontally.

   **** For Tile Only:** Bottom 2 toggle bolts can be replaced with #10 screws and blue anchors (not provided).*

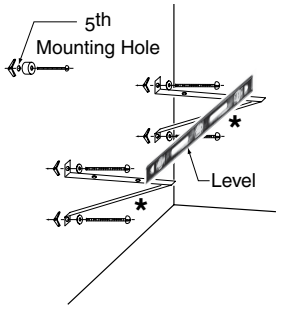


5. Route tubing through hole in cabinet side panel or back wall.

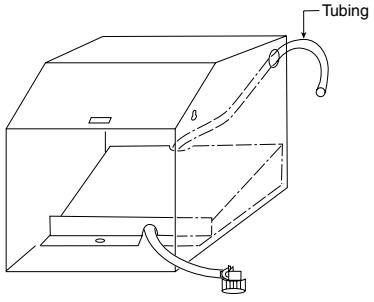


© 2018 Bobrick Washroom Equipment, Inc.

Cabinet Installation cont'd


6. Place double sided adhesive tape on top of back bracket and remove protective strip from adhesive.

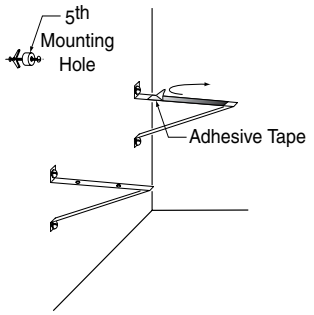


7. Without lowering the back of the cabinet. Place Cabinet on front Bracket aligning weld studs on bottom of cabinet through holes in front bracket and gently place back of cabinet on the back bracket which has the adhesive tape.

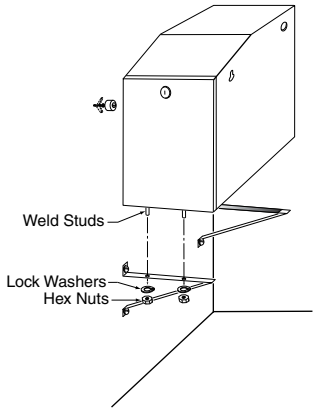


8. Place 2 lock washers and 2 hex nuts supplied on the weld studs on bottom of cabinet and tighten to secure cabinet to front bracket.

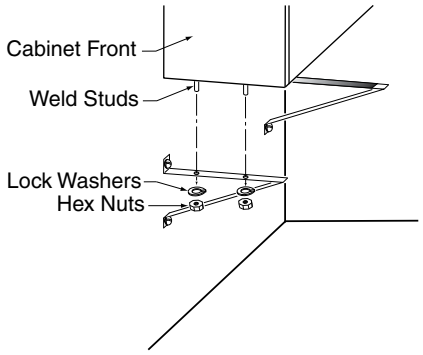


9. To secure cabinet to wall, insert 5th Toggle Bolt head through key hole located at top side of cabinet. Slide bolt head through top of keyhole and tighten.

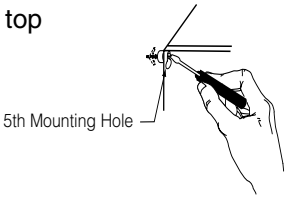

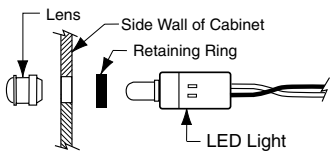

10. Hook up. Low Soap Indicator (LSI) Light.

    Connect two "C" sized batteries (supplied) to battery connector. Place clear lens through the hole from outside of cabinet. Insert Black retaining ring on clear lens. Insert LED (Red Light) from the inside, through the retainer ring into clear lens.

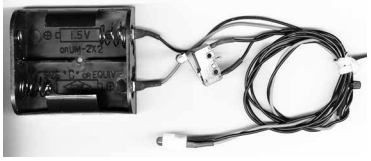


    Note: Red LED Light should flash when the batteries are connected. LED light will stop flashing when reservoir bladder is filled with soap. (Red light may flash for 3-6 hours after SureFlo soap cartridge is connected.)

Form No. 830-569 r10/3/18 S/F
© 2018 Bobrick Washroom Equipment, Inc.
Printed in U.S.A.

Tubing Connections and Soap Pump Installation (Existing and New Soap Dispensers)


1. Remove Existing B-822 Dispenser pump(s), Soap Bottle(s) and Cap(s), if applicable.

   Caution *- Black rubber must be between plastic shank and countertop.*

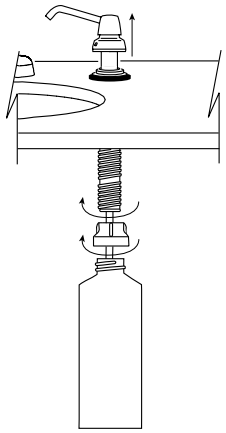


2. If existing B-822 Shank is 6" long, you may cut shank at non-threaded area in the center with a PVC cutter or hack saw, if desired.

   Thick Countertop
   Installer Note:
   If counter top is more than 1-3/4" (45mm) thick, use standard 6" (105mm) shank (Part No. 822-408) without cutting it. 8" (205mm) clearance under top surface of counter is required.

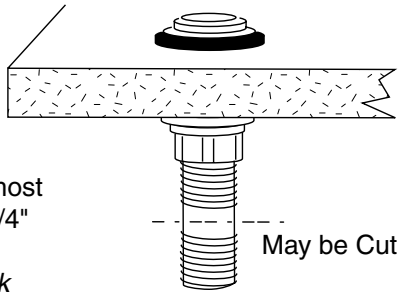

   For new installations, mount 8221-408 Short Shank 3" (75mm) for installation in most countertops or 822-408 Long Shank 6" (150mm) for countertops thicker than 1-3/4" (45mm). Make sure countertop surface around mounting hole is clean and free of soap residue. Insert Shank through 1" (25mm) diameter hole. *Make sure the Black Rubber Washer is in place between the countertop and Shank*. Place 822-43 Rosette Washer and Retaining Nut onto Shank under counter top. *Tighten Retaining Nut against underside of countertop.*

   Caution: *Do not over-tighten Retaining Nut.*

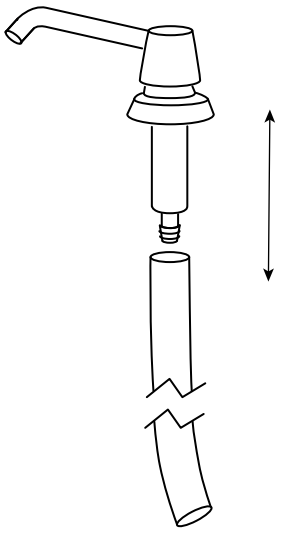


3. Connect 830-313 vertical tubes to 3-barb connections of all Soap Pump Cylinders. Make sure tube is completely engaged on the Cylinder fittings.


© 2018 Bobrick Washroom Equipment, Inc.

Tubing Connections and Soap Pump Installation (Existing and New Soap Dispensers)

4. Insert soap pump assemblies with vertical tubes into Shanks.

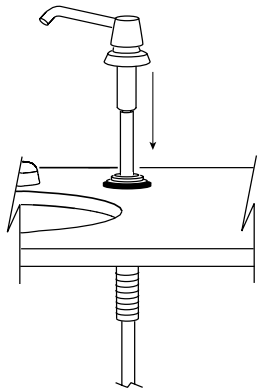


5. Secure the escutcheons by turning clockwise until lock snaps into position. Position Spout over the lavatory.

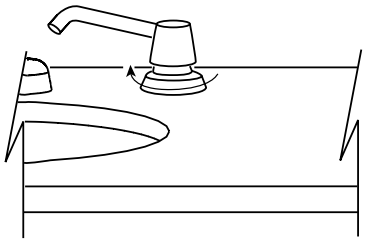


6. Connect Tubing from cabinet to one horizontal arm of 830-311 3-Barb Tee placed under first soap pump in the line. Make sure tube is completely engaged on the Tee fitting.

   Note: Excess tubing may need to be cut-off.

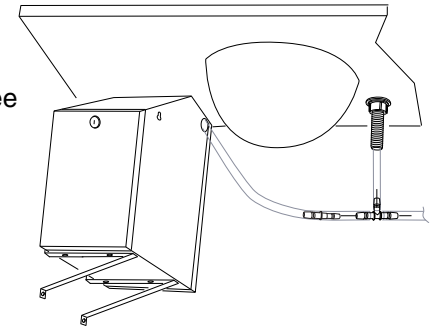


7. Connect bottom end of all soap pump vertical tubes to vertical arms of all Tees except the last soap pump in the line.

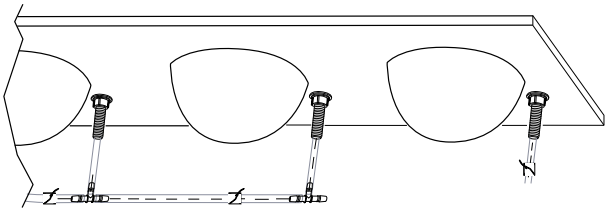


Form No. 830-569 r10/3/18 S/F
© 2018 Bobrick Washroom Equipment, Inc.
Printed in U.S.A.

Tubing Connections and Soap Pump Installation (Existing and New Soap Dispensers)


8. Connect a length of 830-72 Intermediate Tubing from the first Tee to the next Tee locations. Cut Tubing to desired length between soap pumps and connect to successive locations except the last soap pump in the line. Make sure tube is completely engaged on the Tee fittings.

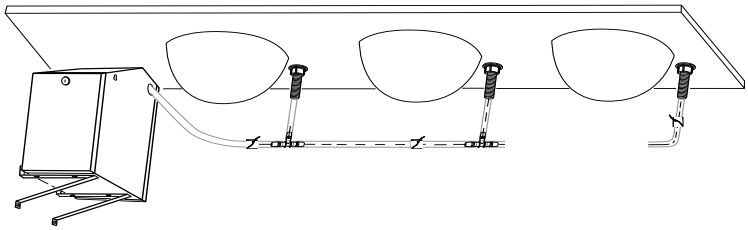


9. Connect intermediate tube to last horizontal arm of Tee at next to last soap pump in the line. Connect 830-312 3-barb reducing connector to other end of last intermediate tube under last soap pump in the line. Connect bottom end of vertical tube of the last soap pump in the line to small end of 830-312 3-Barb reducing connector. Make sure tube is completely engaged on the fittings.

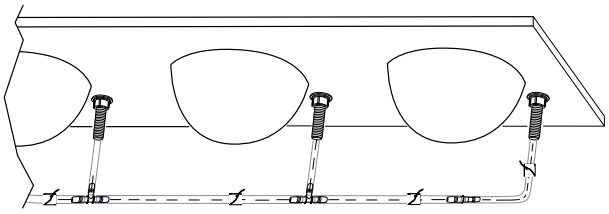

10. Screw Cable Supports into wall between each Soap Pump to support along wall.

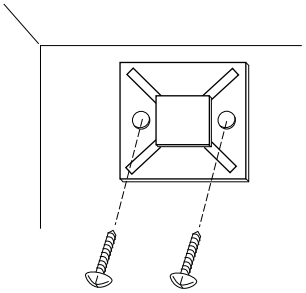


11. Attach intermediate tubing to cable supports with the cable ties between soap pumps

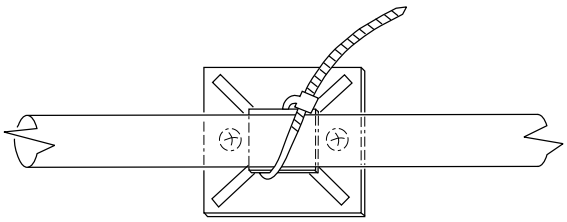


© 2018 Bobrick Washroom Equipment, Inc.

Prime Soap System


1. Place Soap Tank Cartridge into Soap Cabinet and remove protective cover.

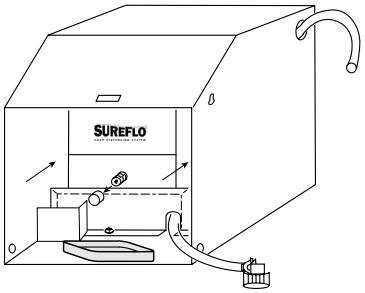


2. Screw Soap Supply Line Cap to Cartridge Outlet by turning clockwise. Soap should flow through the tubing.

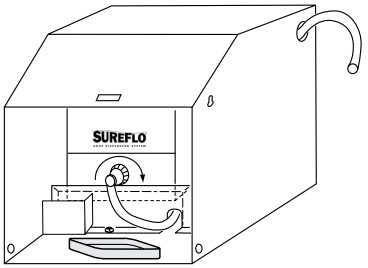

3. Prime Soap System beginning with the dispenser closest to Cabinet until soap is dispensed.

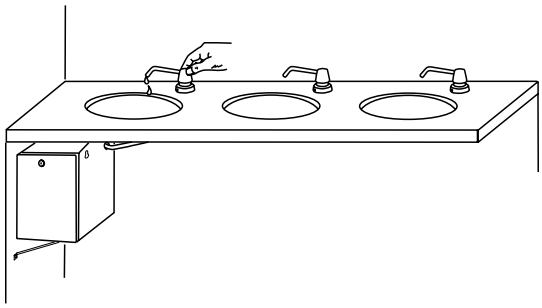

4. Pump each successive dispenser until soap is dispensed and the entire line of tubing is free of air and filled with soap.

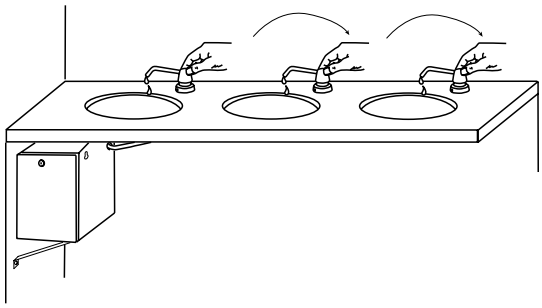

Form No. 830-569 r10/3/18 S/F
© 2018 Bobrick Washroom Equipment, Inc.
Printed in U.S.A.

BUILDING VALUE SINCE 1906

BOBRICK.COM

In the United States: BOBRICK WASHROOM EQUIPMENT, INC.
Los Angeles: 6901 Tujunga Avenue., North Hollywood, CA 91605-6213, Tel: (818) 982-9600, Fax: 818-503-1102
New York: 200 Commerce Drive, Clifton Park, NY 12065-1350, Tel: (518) 877-7444, Fax: 518-877-5029
or email customerservice@bobrick.com

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY
45 Rolark Drive, Toronto, Ontario M1R 3B1, Eastern Canada: Tel: (877) 423-6555, Fax: (877) 423-8555;
Western Canada: Tel: (877) 423-6444, Fax: (877) 423-8444

SureFlo® is a trademark of Bobrick Washroom Equipment, Inc.

Form No. 830-569 r10/3/18 S/F © 2018 Bobrick Washroom Equipment, Inc. Printed in U.S.A.

SUREFLO™
SOAP DISPENSING SYSTEM

INSTALLATION INSTRUCTIONS


Soap Dispenser Connector Kit For Bobrick SureFlo™ Soap Dispensing System

How to Convert an Existing Bobrick B-822 Series Lavatory Mounted Soap Dispenser

1. At each soap dispenser, remove the soap container and container cap from the shank.
2. Remove the soap pump from the top by turning the escutcheon clockwise slightly until it stops. Insert a BobKey using the longest projection into the rectangular hole in escutcheon. Push BobKey straight in, and turn escutcheon counter-clockwise about 1/8 turn. Caution: Do not use BobKey to turn escutcheon.
3. Lift out the entire *Soap Pump Assembly* (***830-155***).
4. Remove the cable tie and supply tube from the pump and discard them.
5. Attach *Swivel Assembly* (***830-146***) to the bottom of the soap pump assembly with the *Low Profile Snapper Clamp* (***830-75***). Make sure small tube of swivel assembly is completely engaged on the soap pump fitting and that the snapper clamp is tightened securely in place.
6. If soap dispenser has a long shank 6" (150mm), replace the shank in countertop with a Short Shank 3" (75mm) (***8221-202***), or cut off shank in the non-threaded area in the center of the shank. Make sure rubber washer is in place between the shank flange and the lavatory. Secure the assembly in the countertop using the *Rosette Washer* and *Mounting Nut* from existing dispenser.
7. Attach *Shank Extension* (830-50) to bottom of shank. The barb at the bottom must face the wall.
8. Wet the exterior of the *Swivel Assembly* (***830-146***) at the O-ring with soap or water and replace *Soap Pump Assembly* (***830-155***) into shank and position the spout over the lavatory. Make sure the O-ring is properly in place in the swivel groove. Secure the escutcheon by turning clockwise until lock snaps into position.

If replacement soap pump is required, order Part No. 830-155 — 4" (100mm) Spout, Soap Pump with Swivel Assembly.

For new installation, order Part No. 830-159 — 4" (100mm) Spout, Soap Pump with Swivel Assembly and Shank.

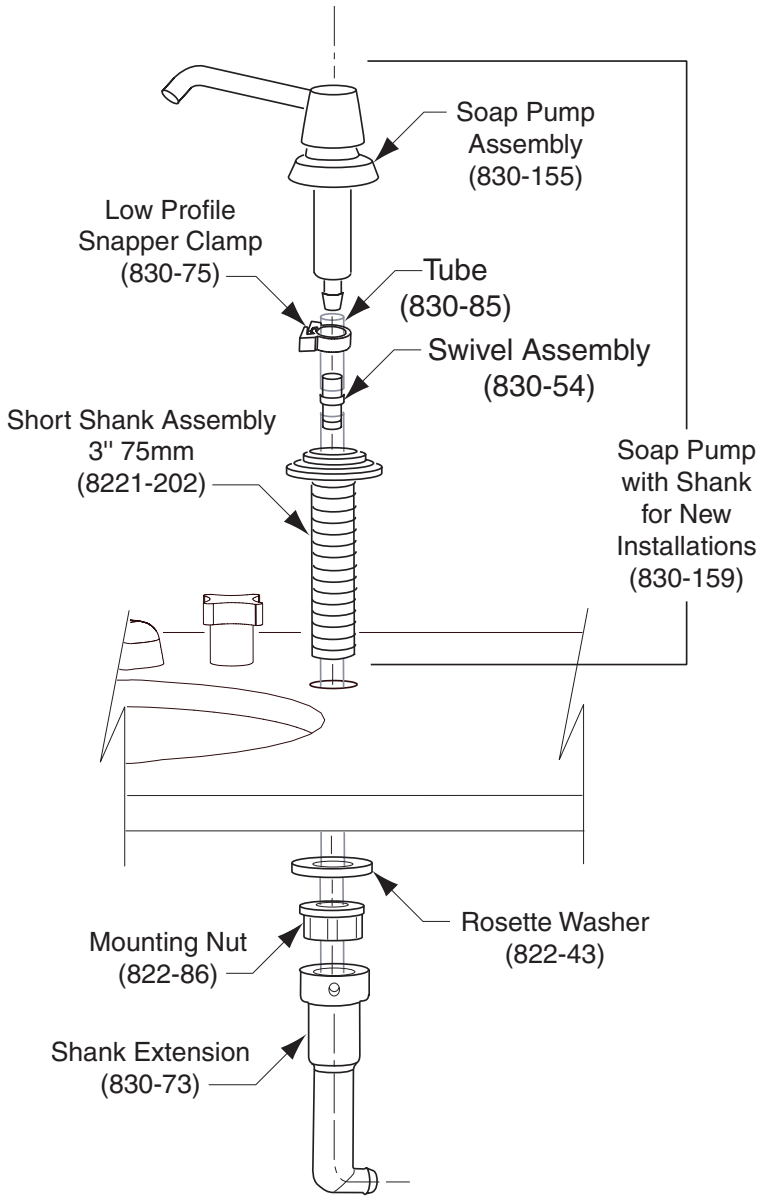

How to Install a New Bobrick Lavatory Mounted Soap Dispenser

1. Make sure countertop or lavatory surface around mounting hole is clean and free of soap residue. Place *Short Shank Assembly 3" (75mm)* through 1" ± 1/16" (25 ± 1.6mm) diameter hole. Make sure rubber washer is in place between the shank flange and the lavatory.
2. Place *Rosette Washer* and *Mounting Nut* onto shank under lavatory. Thread the mounting nut up only until finger-tight against underside of lavatory.
3. Follow steps 7-8 from the above installation instruction sheet. For full SureFlo™ Soap Dispensing System installation instructions see Form No. 830-369.

BOBRICK

© 2007 by Bobrick Washroom Equipment, Inc.
Form No. 830-168 Revised (4/07) Printed in U.S.A.

In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.
200 Commerce Drive, Clifton Park, New York 12065-1350 • Tel: (518) 877-7444 • FAX: 518-877-5029
11611 Hart Street, North Hollywood, California 91605-5882 • Tel: (818) 982-9600 • FAX: 818-503-1102
100 Bobrick Drive, Jackson, Tennessee 38301-5625 • Tel: (731) 424-7000 • FAX: 731-424-7800

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY
45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Tel: (416) 298-1611 • FAX: 416-298-6351

SUREFLO™
SOAP DISPENSING SYSTEM

INSTALLATION INSTRUCTIONS

BOBRICK PART NUMBER 830-215 LOW SOAP INDICATOR (LSI) LIGHT

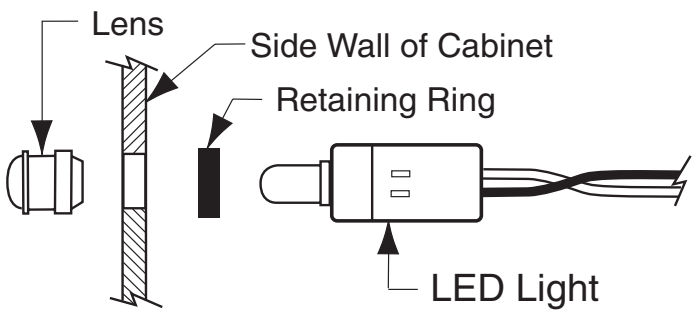


FIGURE 1

LSI Retrofit Kit (830-215)

- "C" Battery
- Clear Lens
- Retaining Ring

Function

When Low Soap Indicator Light flashes, Soap Cartridge must be replaced to allow for uninterrupted flow of soap through SureFlo™ Soap System.

Instructions

1. Attach battery clip to "C" battery and place in holder (located in front of the Bladder Tray assembly).
2. Insert clear lens through visible, side wall of the cabinet **(See Figure 1)**.
3. Attach retaining ring to lens.
4. Attach LED light to lens.

Note: For a new Cabinet Installation, the LSI light will continue to flash for up to 3 hours until the bladder is full of soap.

BOBRICK

© 2006 by Bobrick Washroom Equipment, Inc.
Form No. 830-229 Revised 7/06 Printed in U.S.A.

In the U.S.A.: BOBRICK WASHROOM EQUIPMENT, INC.
200 Commerce Drive, Clifton Park, New York 12065-1350 • Tel: (518) 877-7444 • FAX: 518-877-5029
11611 Hart Street, North Hollywood, California 91605-5882 • Tel: (818) 982-9600 • FAX: 818-503-1102
100 Bobrick Drive, Jackson, Tennessee 38301-5625 • Tel: (731) 424-7000 • FAX: 731-424-7800

In Canada: BOBRICK WASHROOM EQUIPMENT COMPANY
45 Rolark Drive, Scarborough, Ontario M1R 3B1 • Tel: (416) 298-1611 • FAX: 416-298-6351